

## Sail Master cue card

Heading and wind shifts  
 Water depth graph  
 speed (or depth  
 flashes if shallow)



### Switching on/off

Press and hold the *MODE* key to switch on or off.

### Reading the displays on the main page

The upper display shows heading and the graphic display shows the water depth. The lower display shows the boat speed, or flashes the depth when shallow.

### Log, trip-log and top-speed pages

Press and hold the *MODE* key to access the log page. Press the *MODE* key again to display the trip-log page (this is the distance since power-on). Press the *MODE* key again to display top speed since power-on.

### Using the Sail Master for racing

#### Setting the start timer

1. The timer page must be displayed (press the *MODE* key if you don't see an "s" for seconds or "m" for minutes).
2. Select the required start time (usually 10m or 6m) by pressing the *UP-ARROW* or *DOWN-ARROW* keys.
3. When you hear the gun, press the *SET* key.

4. To ensure perfect synchronisation, at the next gun press the *SET* key again.

#### Setting the wind direction

1. The main page must be displayed (press the *MODE* key if you see an "s" for seconds or "m" for minutes).
2. Sail upwind for several minutes to estimate your average close-hauled headings.
3. Steer your average port close-hauled heading and press the *SET* key.
4. Steer your average starboard close-hauled heading and press the *SET* key.

#### During the race

- The heading and wind shifts are displayed (alternating) on the upper display.
- When sailing upwind, lifts and headers are indicated as "L" and "H" (L15° is a lift of 15°).
- When sailing downwind, the lower display indicates how far you are from the mean downwind direction (e.g. 20 indicates you are sailing 20° to port of the mean downwind).

#### Permanent wind shifts

To reset both close-hauled headings, if you are on a port tack press the *DOWN* key, on the starboard press *UP*.

#### Sailing at night

To switch on the backlight, press and hold the *UP-ARROW* key.

For more detailed instructions, refer to the *Sail Master* user guide or [www.tacktick.com](http://www.tacktick.com) UU027-Rev2A